



Maintenance Instructions
for
double leaf hinged doors
(with and without personal door class A-60)

Following control and service to be carried out at least 3 times a year.

1. Check the fastening of frame in wall.
2. Open the doorleaves and lubricate the hinges with oil through the oil holes in the upper part of hinge.
Check the fastening of hinges.
3.
 - a. Check lock function.
Grease lock bolts and tighten screws if required.
 - b. Check and adjust the adjustable striking-plate if required with a screwdriver.
 - c. Check the fastening of handle and tighten the screws if required.
4. If the doorleaves are equipped with seals check the function and change if required.
5. If the doorleaves are equipped with door closer check the fastening and function.
Tighten screws and adjust the adjustment if required.
6. If that door is equipped with other types of equipment check its fastening and function.
Fasten, adjust and grease if necessary.